
## Area sensor with plastic case

### **■**Features

- •13mm slim body with fresnel lens.
- •Adoption of plastic (PC/ABS) injection case
- •Includes Stop transmission function, Mutual interference prevention function, Job indicator Blink function, Light ON/Dark ON switching function
- •Easy to distinguish of side/front and long distance with high luminance twin operation indicators
- •Fast response time, max. 7ms
- •4 types of product (Optical axis pitch
- : 20mm, Number of optical axis : 8, 12, 16, 20)





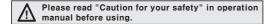


## Specifications

М	odel	BWP20-08(P)	BWP20-12(P)	BWP20-16(P)	BWP20-20(P)			
Se	nsing type	Transmitted beam type						
Se	nsing distance	0.1 ~ 5m						
Se	nsing target		Opaque material	s of min. ø 30mm				
Or	tical axis pitch		201	nm				
Nι	mber of optical axis	8pcs	12pcs	16pcs	20pcs			
Se	nsing width	140mm	220mm	300mm	380mm			
Рс	inting angle	Within ±5° (At over 3m sensing distance)						
Рс	wer supply	12-24VDC ±10% (Ripple P-P:Max. 10%)						
Pr	otection circuit		Incl	udes				
Сι	rrent consumption		Emitter: Max. 80mA,	Receiver: Max. 80mA				
Co	ontrol output	<ul> <li>NPN open collector output  Load voltage:Max. 30VDC, Load current:Max. 150mA,</li></ul>						
L	Operation mode		Light ON/Dark	ON switching				
	Short-circuit protection Includes							
Response time Max.6ms (Frequency B select Max. 7ms)								
Lig	ht source	Infrared LED(850nm modulated)						
Sy	nchronization type	Timing method by synchronous line						
Int	erference protection	Interference protection by master/slave function						
$\pm$ Ambient temperature $-10 \sim +55 ^{\circ}\text{C}$ (at non-freezing status)				n-freezing status)				
mer	Storage temperature	-20 ~ +60 °C						
Environment	Ambient humidity	35 ~ 85%RH						
	Storage humidity	35 ~ 85%RH						
Ambient illumination Sunlight: Max. 10,000/x, Incandescent lamp: Max. 3,000/x				00 <b>/</b> ×				
No	ise strength	The square wave noise by the noise simulator (Voltage: ±240V, Period:10ms, Pulse width:1μs)						
Di	electric strength	1,000VAC 50/60Hz for 1minute						
Insulation resistance		Min. 20MΩ (500VDC mega)						
Vibration		1.5mm amplitude at frequency of 10 ~ 55Hz in each of X, Y, Z directions for 2 hours						
Shock		500m/s² (Approx. 50G) in X, Y, Z directions for 3 times						
Protection		IP40(IEC standard)						
Ма	aterial	• Body : PC/ABS, Lens : Acrylic						
Ca	ble	Emitter: Ø 3.5mm, 4P, 3m / Receiver: Ø 3.5mm, 4P, 3m						
Ur	it weight	Approx. 280g Approx. 320g Approx. 360g Approx. 430g						


## **Area Sensor**

replacement

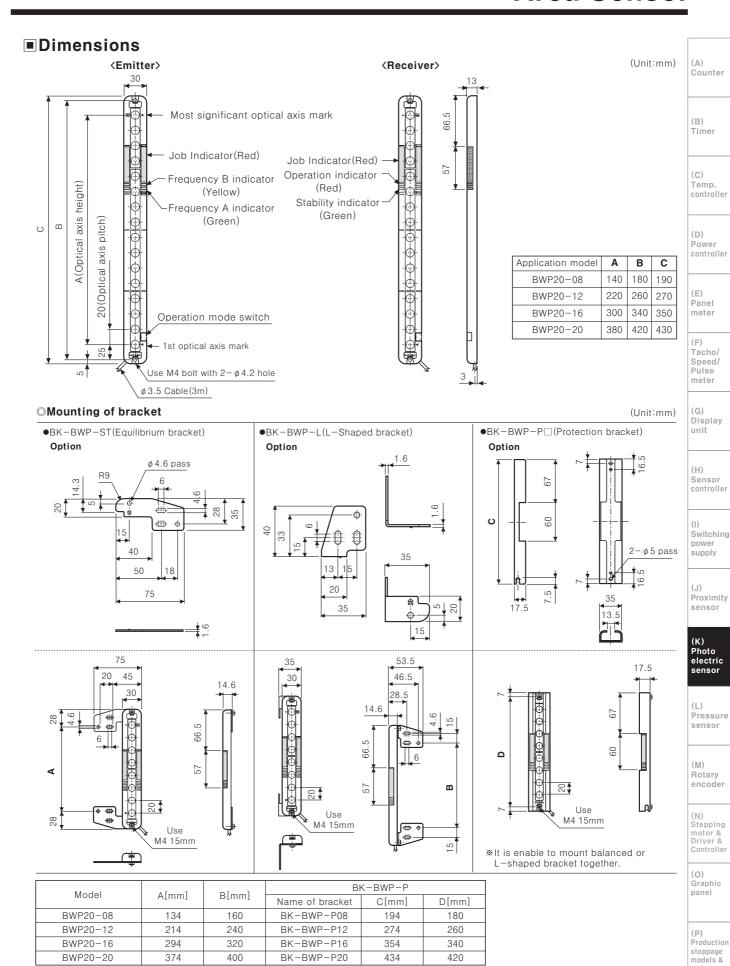

\*Bracket is sold separately.

#### ■ Feature data

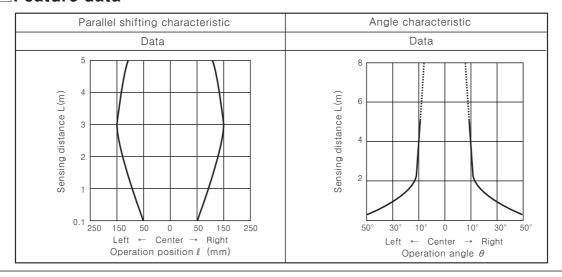


### Input/Output circuit and connection diagram

#### <NPN open collector output type>

#### OV(Blue) 12-24VDC Main circuit Emitter +V(Brown) JOB(Black) SYNC (White) SYNC (White) +V(Brown) OUT(Black) circuit Receiver Load Overcurrent protection circuit OV(Blue)


#### <PNP open collector output type>

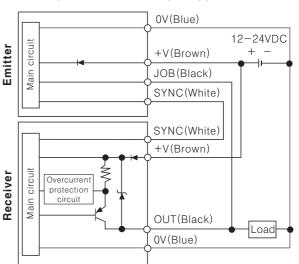


\*If the receiver OUT(Black) line and the emitter JOB(Black) line are not connected each other, the JOB indicator of the emitter is not operated and maintain the light status.

#### ■Timing diagram of operation

Operation mode: Light ON

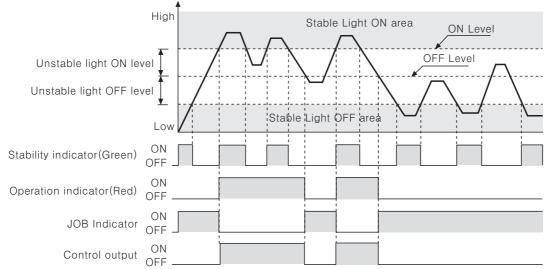

### **■**Structure

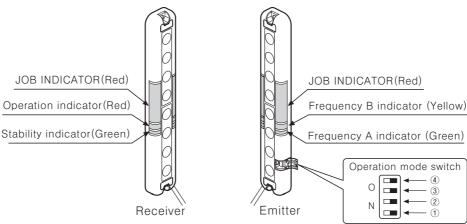

#### Operation mode switch

No	Function	Switch OFF	Switch ON	
1	Transmission frequency selection	Frequency A	Frequency B	
2	Light ON/Dark ON selection	Light ON operation	Dark ON operation	
3	Steady/flashing light of JOB indicator selection	JOB indicator with Steady light	JOB indicator with Flashing light	
4	JOB/TEST selection	Normal mode	TEST mode	


#### ■ Functions

#### **OTEST(Stop transmission function) functions**

In TEST mode, emission is stopped and Green & Yellow LED on emitter flashes alternately.

This function is to see whether sensor operates properly when the transmission is stopped. As it is changed to dark status, control output will be OFF in Light-ON mode and ON in Dark-ON mode.

#### Control output pulse for TEST input

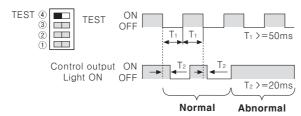

#### OInterference prevention function

In case of using 2 pcs of sensor in serial or parallel in order to extend sensing height, the detection can be failed because of their light interference.

This function is to avoid the light interference as operating a sensor in transmission frequency A and another sensor in transmission frequency B to protect these kinds of failures.

	Operation mode switch	Frequency A, B indicator		
Sensor (A) (Transmission frequency A)	4 3 2 1 FREQ.A	Frequency B(Yellow) Frequency A(Green)		
Sensor® (Transmission frequency B)	4 3 2 FREQ.B 1	Frequency B(Yellow) Frequency A(Green)		

#### **OSwitching Light-ON / Dark-ON**

In Light-ON mode, the control output is ON when the target is missing. In Dark-ON mode, the control output is ON when the target is present.

	Operation mode switch	Control output operation		
Light -ON	(a) Light-ON	It is ON when it is lighted.		
Dark -ON	04 (3) (3) (4) (3) (4) (4) (4) (4) (4) (4) (4) (4) (4) (4	It is ON when it is shaded.		

# Switching Steady / Flashing Light of JOB indicator


JOB indicator will be lighted and flashed to make out work sensing operation more easily.

Operation mode switch	JOB indicator operation
@ GLOW @ GLOW	Light on
BLINK (3)	Flashing

#### Installation

#### OFor direction of installation

Emitter and receiver should be installed as same up/down position.

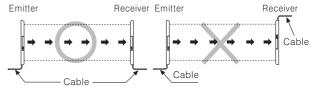

(A) Counter

(B) Timer

(C) Temp. controller

(D) Power controller

(E) Panel meter

(F) Tacho/ Speed/ Pulse meter

(G) Display unit

(H) Sensor controller

(I) Switching power supply

(J) Proximity sensor

(K) Photo electric sensor

(L) Pressure sensor

(M) Rotary encoder

(N) Stepping motor & Driver & Controller

(O) Graphic panel

(P) Production stoppage models & replacement


# **BWP Series**

#### **OReflective Surface Interference**

In the case shown below, the beam can be reflected from the wall or flat surface and exposed to the receiver.

Please pre-test the operation of sensor with a target under this condition.


(Interval distance : Min. 0.3m)

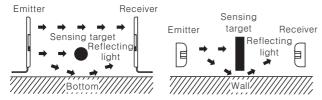

#### OFor prevention of interference

It may cause interference when installing more than 2 sets of the sensor. In order to avoid the interference of the sensor, please install as following figures and use the interference prevention function.


#### Transmission direction should be opposited between 2 sets.

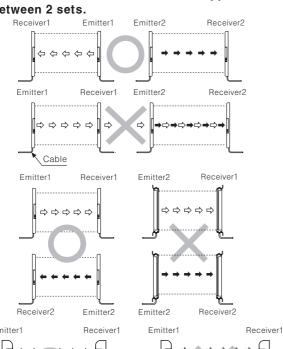

#### •Baffle should be installed between 2 sets.


þ

Fmitter2

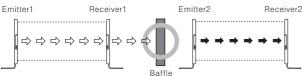

Fmitter2

#### Keep sufficient distance between two sets of sensors to avoid mutual interference.

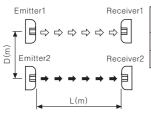

Receiver2

	Sensing distance(L)	Installation allowable distance(D)	
	0.1~1m	Min. 0.2m	
2	Min. 1m	Min. 0.3m	
		be a little difference on installing	

environment.

## **■**Operation indicator

	Emitter		Receiver				
Item	Indicator		Indicator			Control	
110111	Green	Yellow	JOB indicator	Green	Red	JOB indicator	output
Power on	≎	•	_	_	_	_	_
FREQ. A operation	≎	•	_	_	_	_	_
FREQ. B operation	≎	≎	_	_	_	_	_
TEST	▶	•	✡	✡	•	≎	OFF
Stable light ON	_	_	•	≎	✡	•	OFF
Unstable light ON	_	_	•	•	✡	•	ON
Unstable light OFF			≎	•	•	≎	ON
Stable light OFF	_	_	≎	≎	•	≎	OFF
Flashing function ON			•	✡	•	•	OFF
Synchronous line malfunction	_	_	✡	<b>(b)</b>	•	≎	OFF
Overcurrent	_	_	≎	•	•	♡	OFF

Display classification list					
Light on					
Light off					
Flashing by 0.3 sec.					
	Flashing simultaneously by 0.3 sec.				
• •	Cross-Flashing by 0.3 sec.				

<sup>\*\* &#</sup>x27;Control output' above is for Light ON mode. For Dark ON mode, they operate in opposite. (When malfunction of synchronous line or overcurrent occurs, control output is OFF in both modes.)

## ■Inspection/Treatment for malfunction

Malfunction	Caution	Treatment
	Power supply	Supply rated power
Non-operation	Cable disconnection incorrect connection	Check the wiring
	Rated connection failure	Use within rated sensing distance
l	Contamination by dirt on sensor cover	Remove dirt by soft brush or cloth
Irregular operation	Connector connection failure	Check the assembled part of the connector
	Out of rated sensing distance	Use within rated sensing distance
Control output is OFF even though	There is an obstacle that cut off the light betwee emitter and receiver	Remove the obstacle
there is not a target object.	There is a strong electric wave or noise generated by such as motor, electric generator, high voltage line etc.)	Put away the strong electric wave or noise generator.
LED display for synchronous line	Synchronous line incorrect connection or disconnection	Check the wiring
malfunction	Damage on synchronous circuit of emitter or receiver	Contact us
LED display for	Shorted control output line	Check the wiring
overcurrent	Over load	Check the rated load capacity

Receiver2